




S2686-LED MOUNTING INSTRUCTIONS

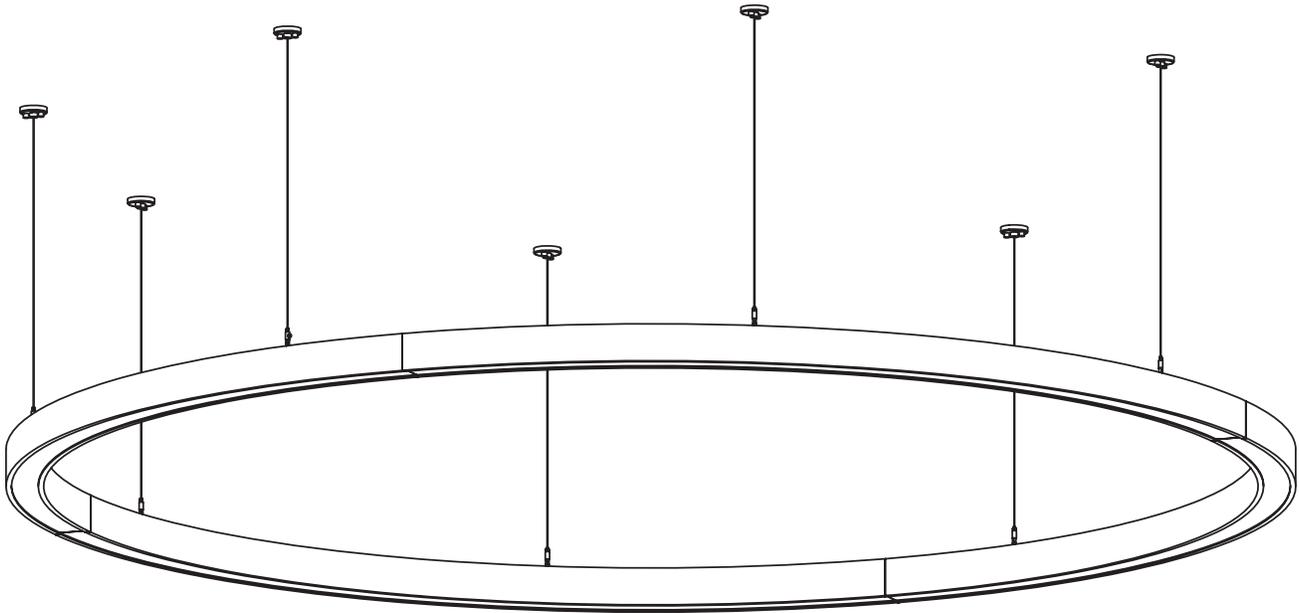


BLOCKING REQUIRED
IN CEILING TO SUPPORT
100 LB FIXTURE.

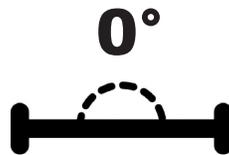


FIXTURE **MUST** BE
ASSEMBLED ON A FLAT
SURFACE.

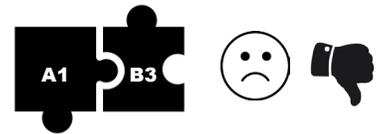

DO NOT MIX SECTIONS
FROM DIFFERENT SETS.

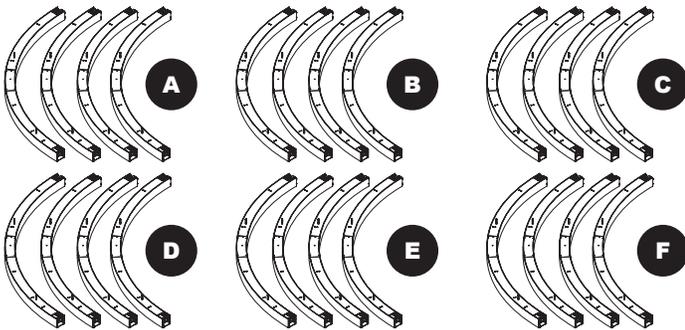

FIXTURES ARE SHIPPED IN SETS.
(A, B, C, D, E, F)

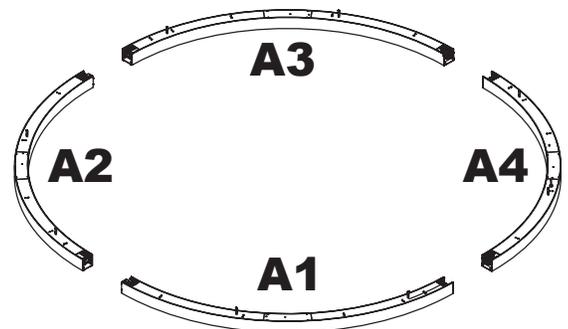

EACH FIXTURE HAS 4 SECTIONS.
(A1, A2, A3, A4)



STEP 1

FIXTURE **MUST** BE ASSEMBLED ON A FLAT SURFACE.
DO NOT MIX UP SECTIONS FROM DIFFERENT SETS.



STEP 2



LINE UP SECTIONS IN ORDER USING LABEL SEQUENCE
A1-A2; A3-A4; A5-A6; A7-A8

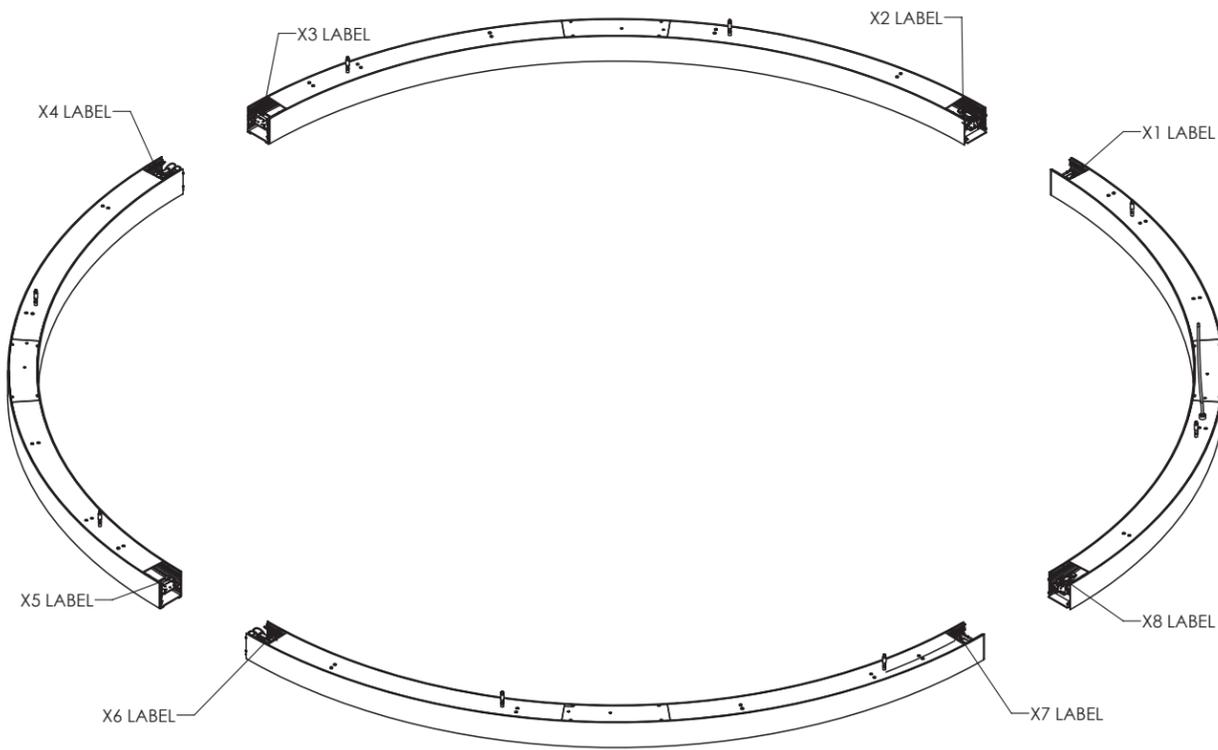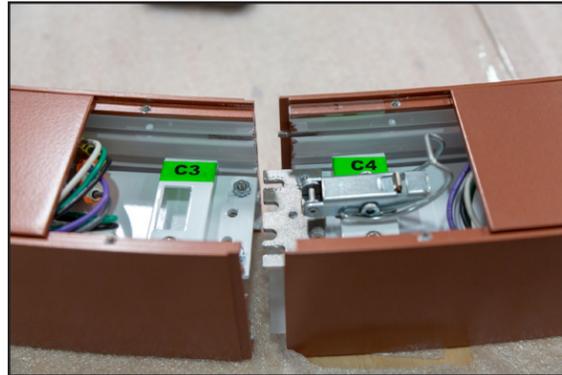

DO NOT MIX UP SECTIONS FROM DIFFERENT SETS.

STEP 3




LOOSEN (2) 8-32 HEXNUTS ON END OF WHITE BRACKET
UNDER NON-LATCH SIDE, (A1, A3, A5 AND A7 ENDS.)

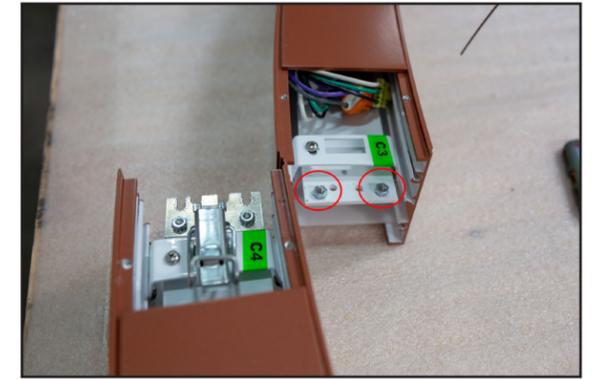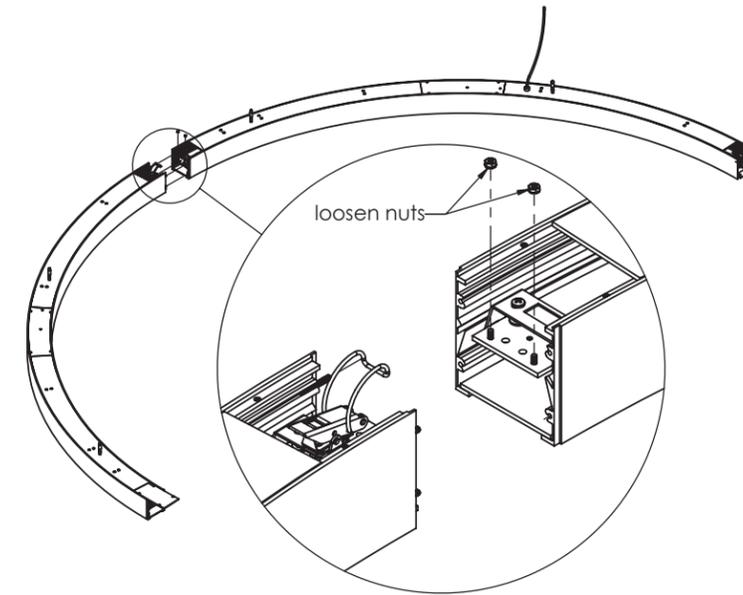

STEP 4


SLIDE A1 ONTO A2.

NOTE: ACRYLIC DIFFUSER HAS AN OVERLAPPING TAB ON LATCH SIDE. WHEN JOINING THE SECTIONS TOGETHER, PUSH UP SLIGHTLY ON ACRYLIC DIFFUSER (LATCH SIDE) FROM THE BOTTOM, SO END OF ACRYLIC ON A1 WILL SLIDE UNDER TAB ON A2.

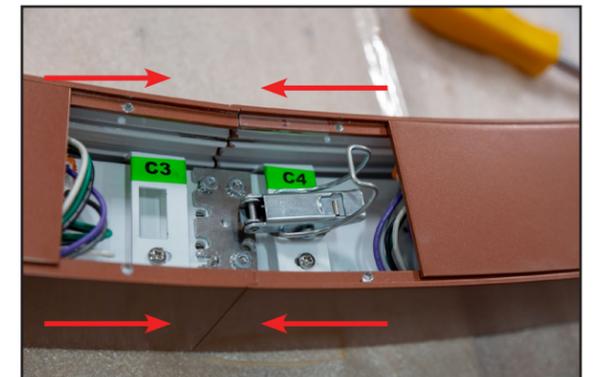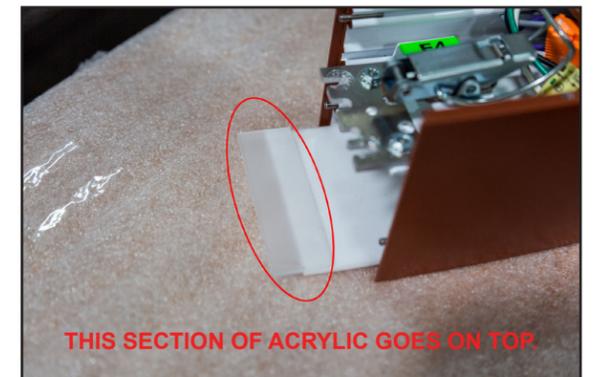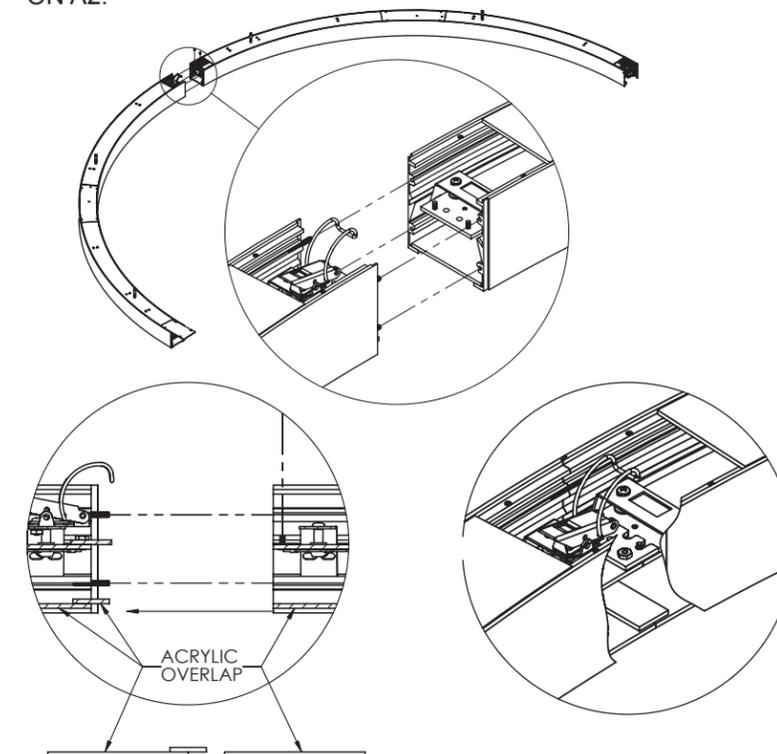

STEP 5



ENDS SHOULD GO TOGETHER SO SEAMS ARE TIGHT AND STRAIGHT.
GAPS IN SEAM WILL NOT ALLOW COVERS AT SEAMS TO MOUNT PROPERLY.

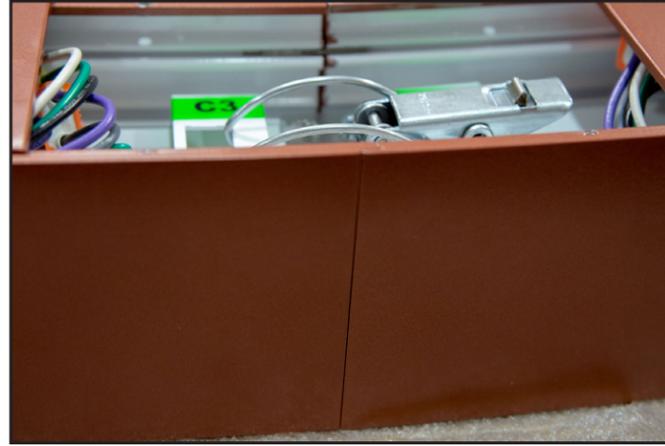

STEP 6

ONCE SEAM IS TOGETHER, WITHOUT FORCING, ENGAGE LATCH. **DO NOT FORCE.**


NOTE: LATCH IS NOT DESIGNED TO PULL SIDES TOGETHER. IT IS ONLY TO SECURE THE ENDS OF SECTIONS AFTER THEY ARE SLID INTO PLACE. WHEN FULLY ENGAGED, LATCH WILL "CLICK" INTO PLACE.

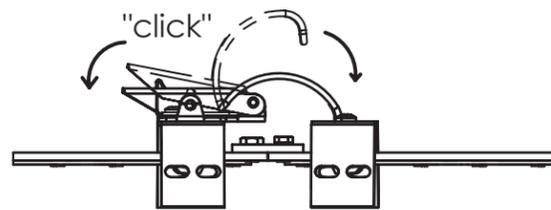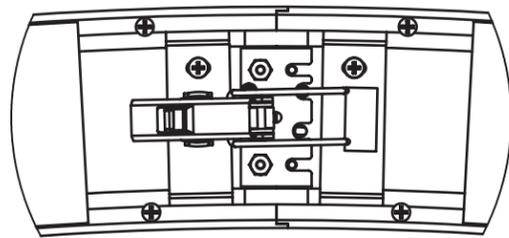

DO NOT USE LATCH TO PULL SIDES TOGETHER

STEP 7

TIGHTEN (2) 8-32 HEXNUTS ON END OF WHITE BRACKET UNDER A1 SIDE.


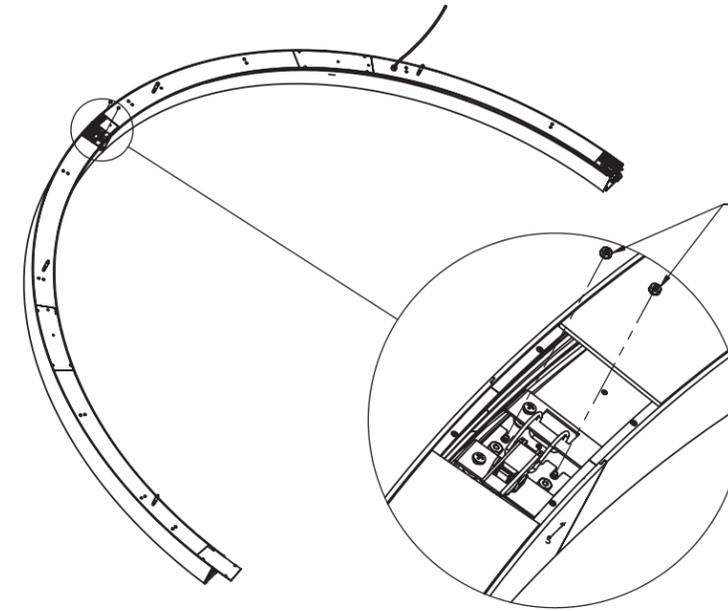


ONCE CLIPPED
RE-ATTACH NUTS



STEP 8


THERE ARE (2) QUICK CONNECTIONS AT EVERY SEAM. GREEN CONNECTS TO THE GREEN CONNECTOR. ORANGE CONNECTS TO ORANGE CONNECTOR.

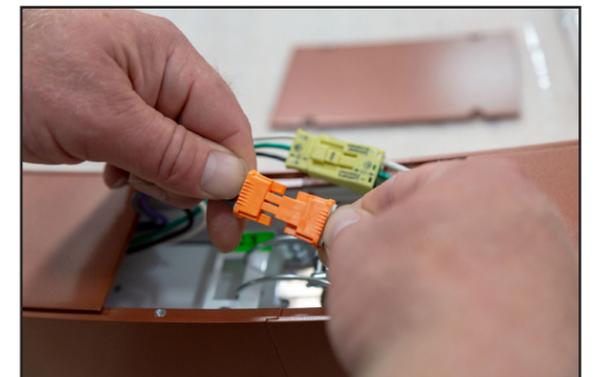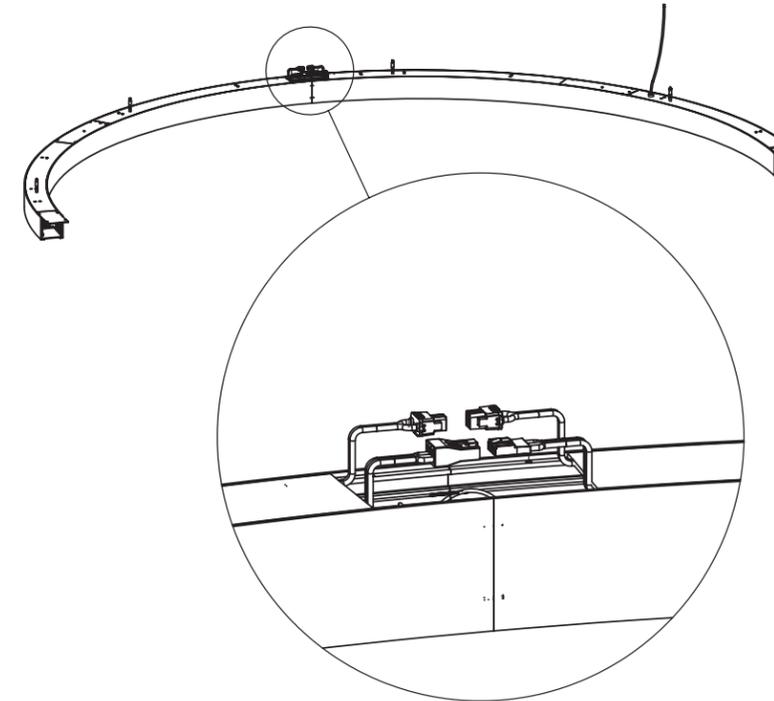

STEP 9

COVER LABELED A1-A2 CAN NOW BE ATTACHED WITH (4) FLAT HEAD SCREWS PROVIDED.

DO NOT OVERTIGHTEN SCREWS.

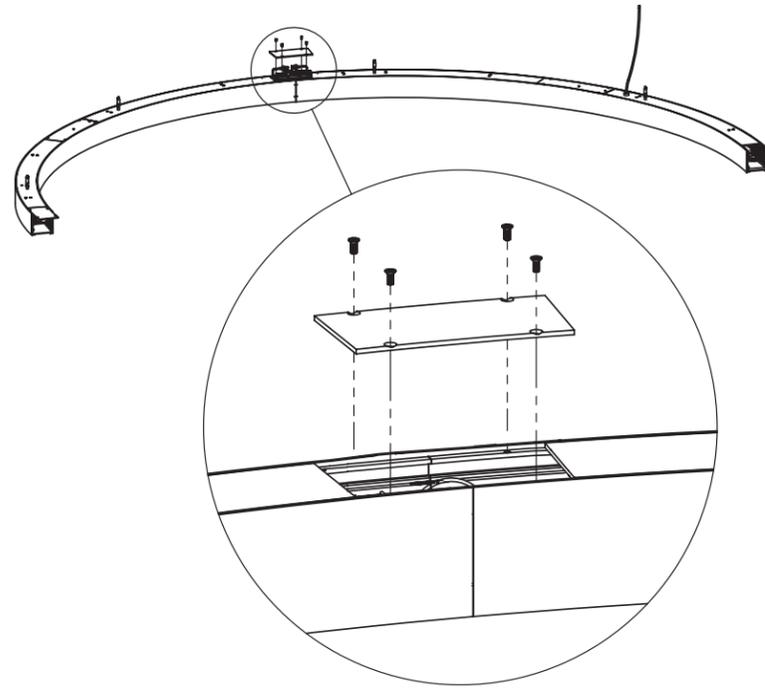

STEP 10


REPEAT STEPS 3-9 ON THE REMAINING (3) SECTIONS.




STEP 11

ONCE ALL CONNECTIONS ARE MADE, AND COVERS ARE ON, FIXTURE CAN BE MOUNTED TO CEILING.

NOTE: USE APPROPRIATE FASTENERS FOR THE CEILING MATERIAL. MOUNTING TO SUPPORT 100 LBS. FIXTURE WILL REQUIRE MULTIPLE SUPPORT POINTS TO LIFT SAFELY AND WITHOUT DAMAGE. FIXTURE MUST BE MOUNTED LEVEL TO KEEP THE SEAMS FROM WANTING TO SEPARATE.

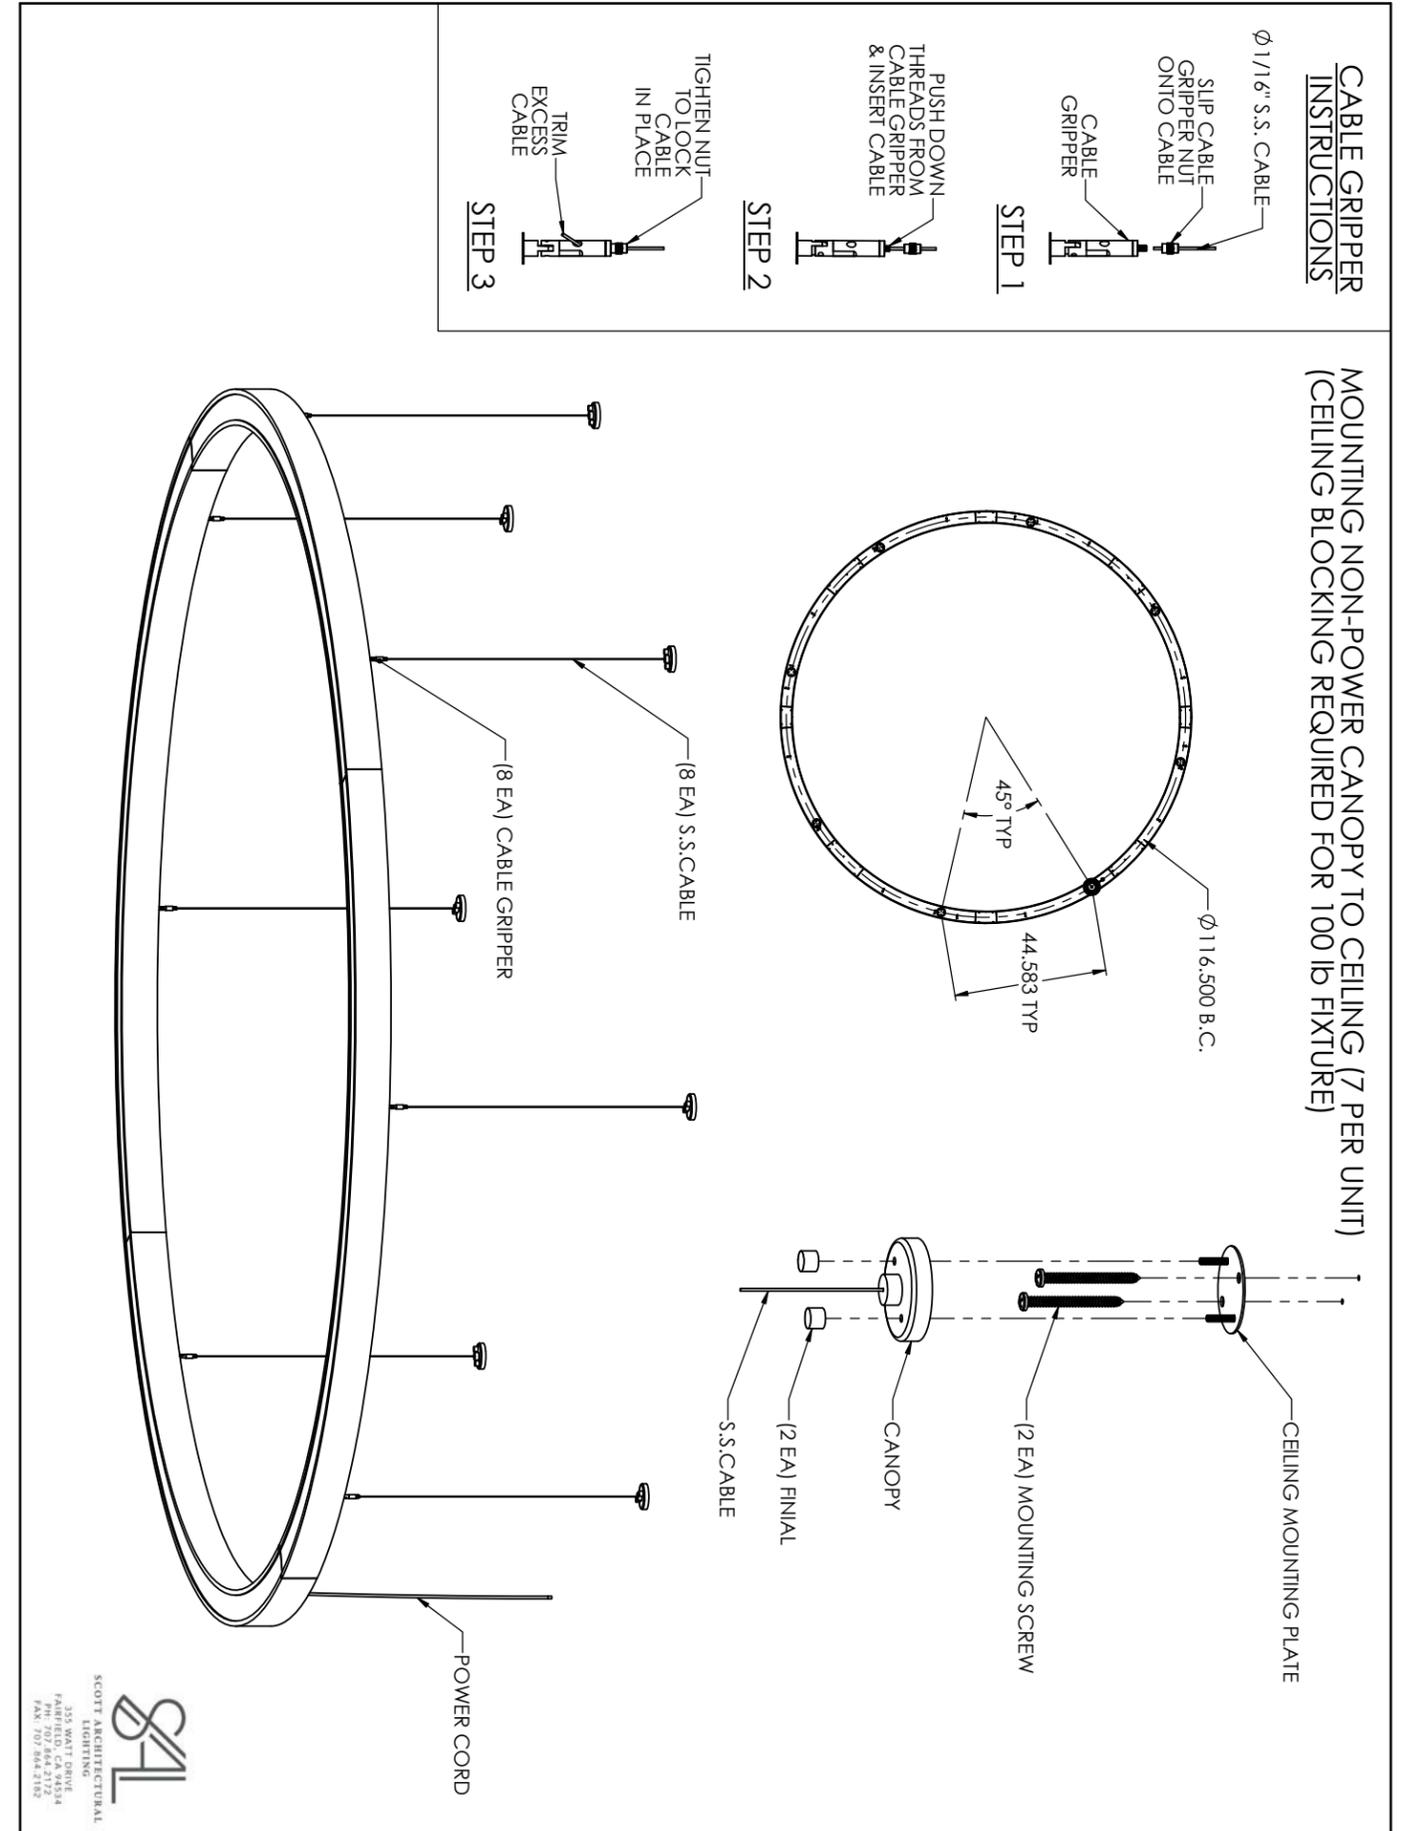


CABLE GRIPPER INSTRUCTIONS

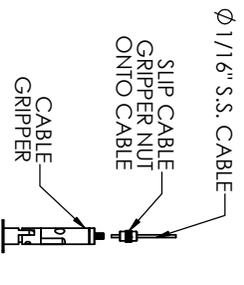

STEP 1



STEP 2

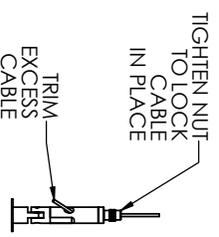

STEP 3

MOUNTING POWER CANOPY TO CEILING (1 PER UNIT)

NOTE: MAKE ALL WIRE CONNECTIONS PER LOCAL & NEC CODES

